


FLOODLIGHT - DUAL LED ASSEMBLY INSTRUCTIONS

KIT P/N 511-00837-01

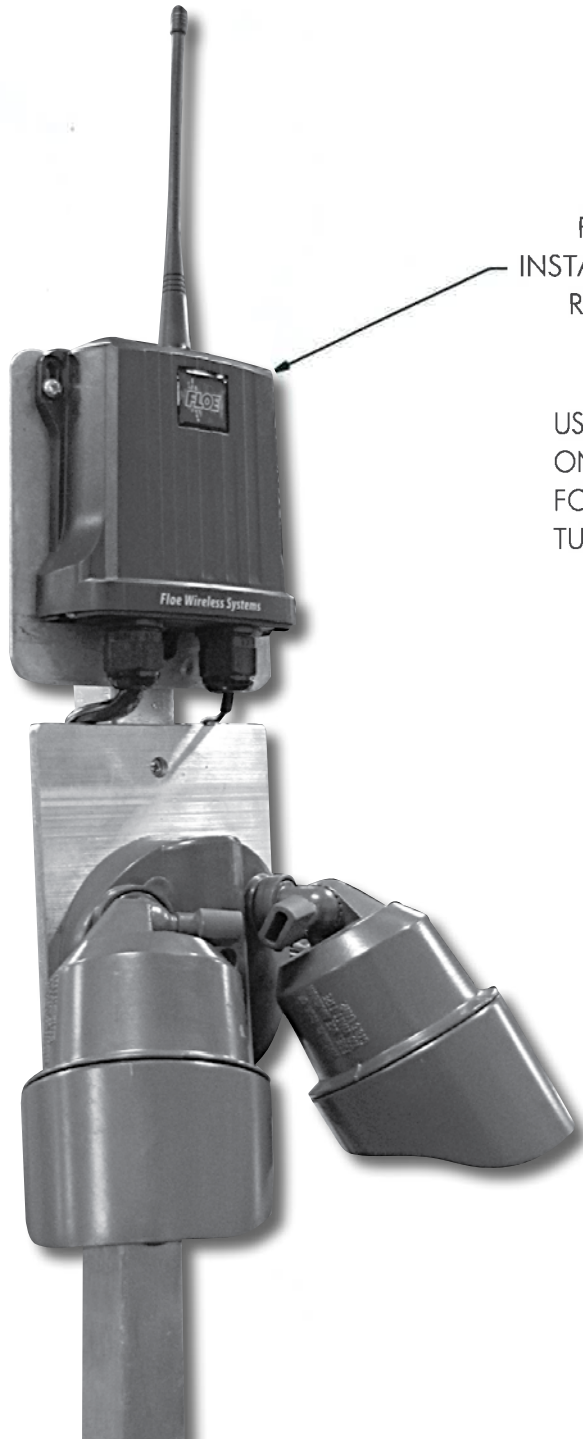

FLOODLIGHT REQUIRES PRIOR
INSTALLATION OF THE WIRELESS RADIO
REMOTE KIT (P/N 511-00832-00)

USE BUTTON ON REMOTE TO TURN LIGHT
ON AND OFF, THE LIGHT REMAINS ON
FOR 15 MINUTES BEFORE AUTOMATICALLY
TURNING OFF

TOOLS REQUIRED

- 1 1/32 WRENCH OR SOCKET
- PHILLIPS SCREW DRIVER
- SLOTTED SCREW DRIVER

REPLACEMENT BULBS P/N

- 007-05430-00

INSTRUCTION P/N 611-00837-01
ISSUED: 3/2/2016


Want the best? Go with the FLOE!

SHEET 1 OF 2

© Floe International, Inc.
48473 State Hwy. 65
McGregor, MN 55760
All rights reserved

INSTALLATION & LAMP ADJUSTMENT

FIG. 1

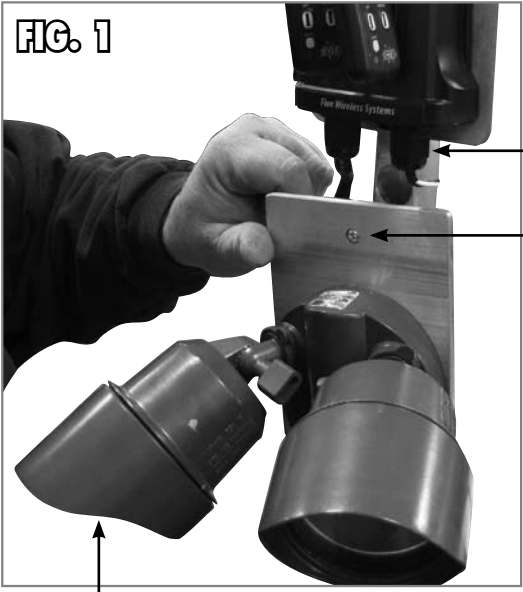

PLUG LIGHT
PLUGS INTO
RADIO REMOTE

INSERT BOLT ON
PLATE THROUGH
HOLE IN MAST
& THREAD #8-32
NYLOCK NUT TO
BOLT ON OTHER
SIDE OF MAST


THREAD BULBS
INTO LIGHT
SOCKETS

FIG. 2



TIGHTEN NUT &
BOLT TO MAST
USING PHILLIPS
SCREW DRIVER &
11/32 WRENCH

FIG. 3

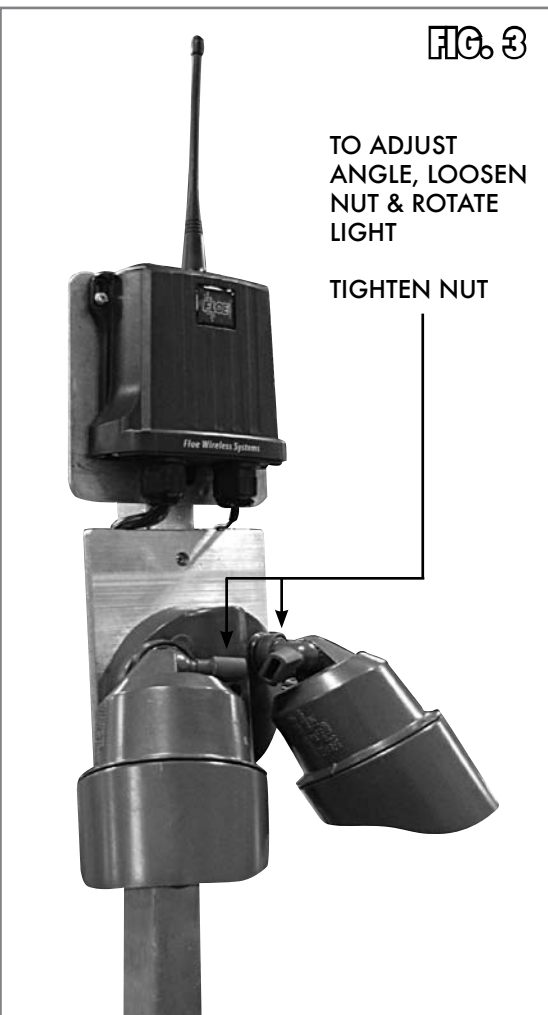

TO ADJUST
ANGLE, LOOSEN
NUT & ROTATE
LIGHT

TIGHTEN NUT