


FLOE BATTERY BOX ASSEMBLY W/ VOLT METER

ASSEMBLY INSTRUCTIONS

P/N 111-00461-00

BILL OF MATERIALS

| ITEM NUMBER | PART NUMBER | DESCRIPTION | QTY |
|-------------|--------------|------------------------------------|-----|
| 1 | 002-03108-00 | Battery Box, Fabbed for Volt Meter | 1 |
| 2 | 007-05367-00 | Harness, Battery Box Volt Meter | 1 |
| 3 | 007-05368-00 | Meter, 12 Volt LED | 1 |

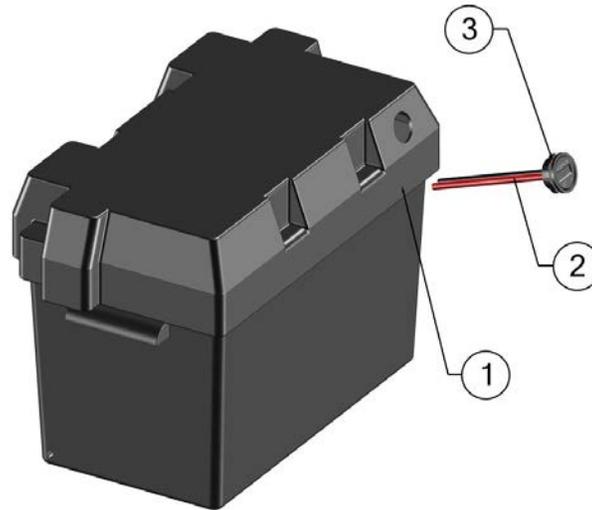

ASSEMBLY

1. PLACE BATTERY INSIDE OF BATTERY BOX.
2. PLUG THE RED WIRE FROM HARNESS ONTO POSITIVE TERMINAL ON VOLT METER AND BLACK WIRE ONTO NEGATIVE TERMINAL ON VOLT METER. TERMINALS ARE LABELED WITH A PLUS AND MINUS FOR POSITIVE AND NEGATIVE RESPECTIVELY.
3. CONNECT AND SECURE THE RING TERMINAL FROM THE RED WIRE TO POSITIVE TERMINAL OF THE BATTERY AND THE RING TERMINAL FROM THE BLACK WIRE TO THE NEGATIVE TERMINAL OF THE BATTERY.
4. PLACE BATTERY BOX COVER OVER BATTERY COVER AND SECURE WITH INCLUDED BATTERY STRAP.

INSTRUCTION P/N: 611-00461-00
RELEASED 9/26/17



© Manufactured by:
Floe International Inc.
48473 State Hwy. 65
McGregor, MN 55760
www.floeintl.com