

FLOE DOCK SIDE QUICK-ATTACH SECTIONAL RAMP BRACKETS



FLOE KIT P/N 510-02576-00


ASSEMBLY INSTRUCTIONS

BOM/EXPLODED VIEW

| P/N 510-02576-00 | | | |
|------------------|--------------|------|---|
| Number | Part Number | QTY. | Description |
| 1 | 001-73815-00 | 2 | BHCS 3/8 – 16 X 1" SS |
| 2 | 002-00155-00 | 2 | CONNECT, QUICK ATT. SECTIONAL RAMP – 2" |

TOOLS REQUIRED

-7/32" Hex Socket

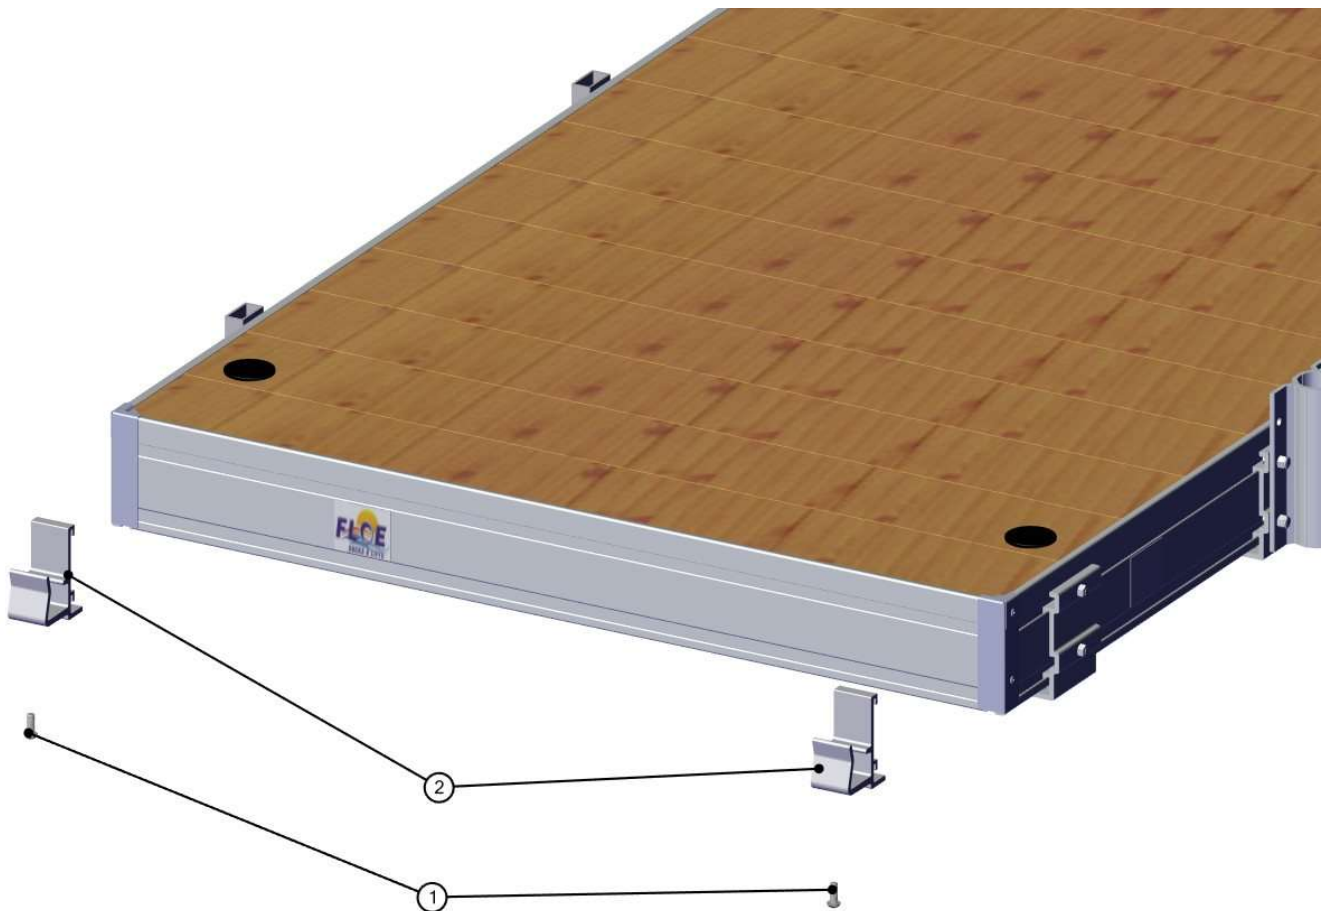

© Manufactured by:
Floe International Inc.
48473 State Hwy. 65
McGregor, MN 55760
www.floeintl.com


STEP 1

PLACE BRACKETS INTO DOCK SIDE.



STEP 2

INSERT 3/8-16 x 1" BUTTON HEAD BOLT INTO THE BOTTOM OF EACH BRACKET. TORQUE TO 5 FT/LBS MAXIMUM.

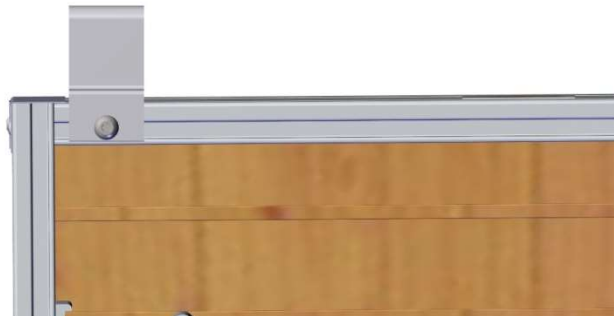

STEP 3

ALIGN DOCK RAMP (NOT INCLUDED) OVER BRACKETS.

