

# FLOE QUICK-ATTACH SECTIONAL BENCH/LADDER BRACKETS

KIT P/N 510-02570-00

ASSEMBLY INSTRUCTIONS



## BOM/EXPLODED VIEW


P/N 510-02570-00		KIT, QA SECTIONAL LADDER/BENCH		
NUMBER	PART NUMBER	QTY.	DESCRIPTION	
1	001-70105-00	2	HHCS, 3/8-16 x 1" SS	
2	001-70114-00	4	HHCS, 3/8-16 x 2 3/4" 18-8 SS	
3	001-76071-00	4	NUT, NYLOCK 3/8-16 ALUM.	
4	002-00150-00	2	BRACKET, QUICK ATT. SECTIONAL ACC. - 2"	

### TOOLS REQUIRED

- 9/16" SOCKET/WRENCH
- TORQUE WRENCH
- TAPE MEASURE



\*BENCH NOT INCLUDED

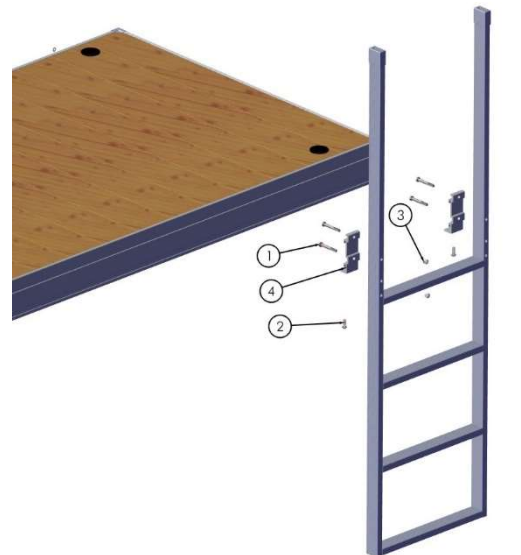


\*LADDER NOT INCLUDED

# BENCH BRACKETS INSTALLATION


## STEP 1

INSERT 3/8-16 x 2 3/4" BOLTS INTO EACH QUICK ATTACH BRACKET.

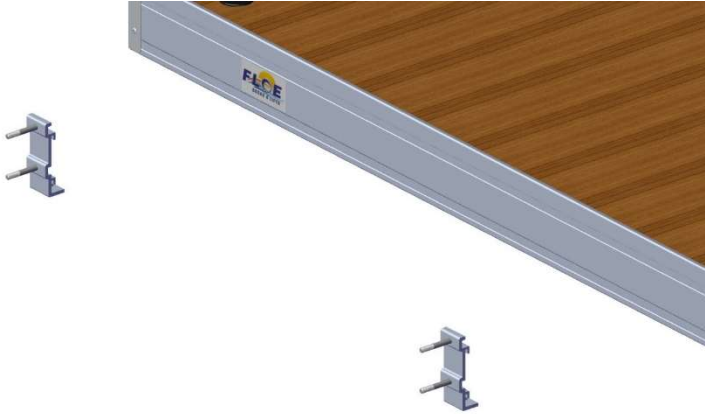

## STEP 2

PLACE BRACKETS IN DOCK SIDE 44 1/4" APART FROM CENTER TO CENTER OF EACH BRACKET.

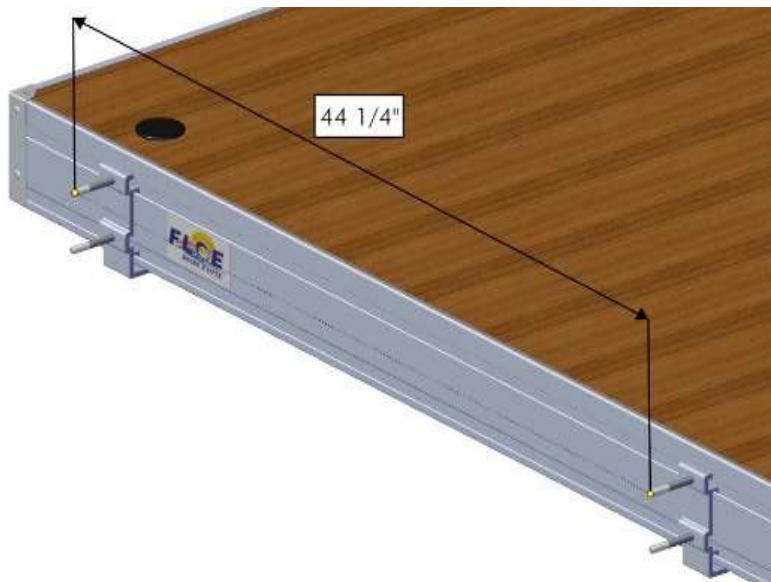

## STEP 3

INSERT 3/8-16 x 1" BOLTS INTO BOTTOM OF EACH BRACKET. TORQUE TO 6 FT-LBS MAX.



**STEP 4**

**ALIGN HOLES IN BENCH (NOT INCLUDED) ONTO 3/8-16 X 2 3/4" BOLTS.**



**STEP 5**

**PLACE 3/8-16 NYLOCK NUTS ON BOLTS AND TORQUE TO 25 FT-LBS.**



# LADDER BRACKETS INSTALLATION


## STEP 1

INSERT 3/8-16 x 2 3/4" BOLTS INTO EACH QUICK ATTACH BRACKET



## STEP 2

PLACE BRACKETS IN DOCK SIDE 19" APART FROM CENTER TO CENTER OF EACH BRACKET.

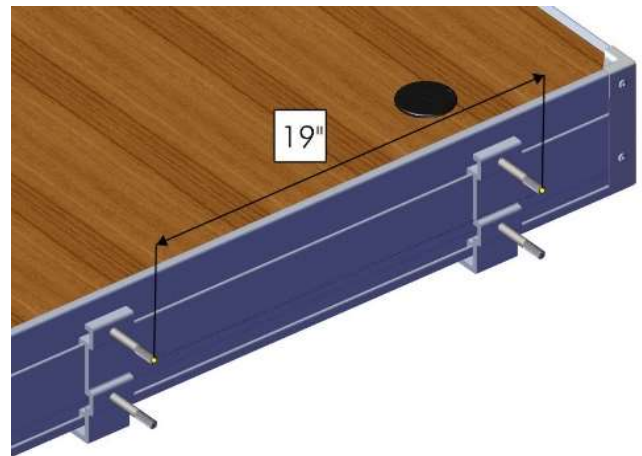

## STEP 3

INSERT 3/8-16 x 1" BOLTS INTO BOTTOM OF EACH BRACKET. TORQUE TO 6 FT-LBS MAX.



## STEP 4

ALIGN UPPERMOST HOLES IN LADDER (NOT INCLUDED) ONTO 3/8-16 x 2 3/4" BOLTS.



## STEP 5

PLACE 3/8-16 NYLOCK NUTS ON BOLTS AND TORQUE TO 30 FT-LBS.

