

FLOE QUICK-ATTACH SECTIONAL BENCH/LADDER BRACKETS

KIT P/N 510-02570-00

ASSEMBLY INSTRUCTIONS




BOM/EXPLODED VIEW

P/N 510-02570-00		KIT, QA SECTIONAL LADDER/BENCH		
NUMBER	PART NUMBER	QTY.	DESCRIPTION	
1	001-70105-00	2	HHCS, 3/8-16 x 1" SS	
2	001-70114-00	4	HHCS, 3/8-16 x 2 3/4" 18-8 SS	
3	001-76071-00	4	NUT, NYLOCK 3/8-16 ALUM.	
4	002-00150-00	2	BRACKET, QUICK ATT. SECTIONAL ACC. - 2"	


TOOLS REQUIRED

- 9/16" SOCKET/WRENCH
- TORQUE WRENCH
- TAPE MEASURE

SCAN QR CODE BELOW FOR
LINK TO ASSEMBLY VIDEO

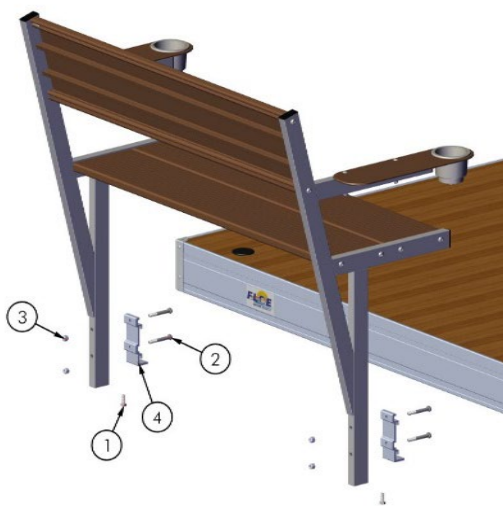

*BENCH NOT INCLUDED

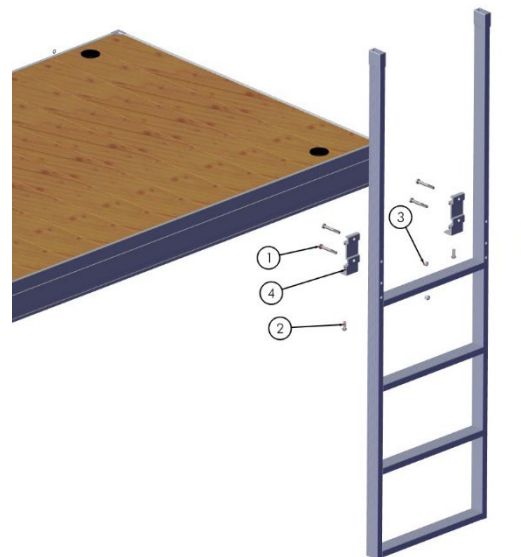


*LADDER NOT INCLUDED

BENCH BRACKETS INSTALLATION


STEP 1

INSERT 3/8-16 x 2 3/4" BOLTS INTO EACH QUICK ATTACH BRACKET.

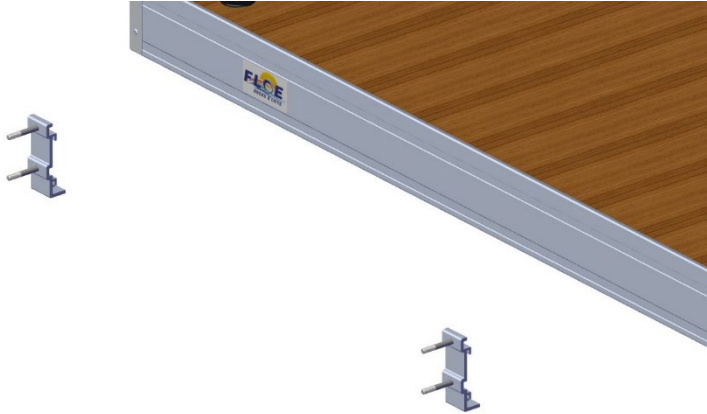

STEP 2

PLACE BRACKETS IN DOCK SIDE 44 1/4" APART FROM CENTER TO CENTER OF EACH BRACKET.

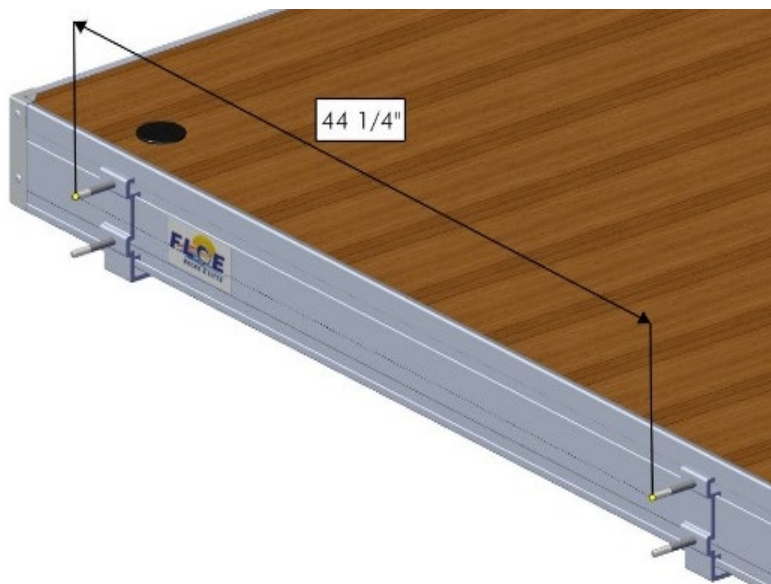

STEP 3

INSERT 3/8-16 x 1" BOLTS INTO BOTTOM OF EACH BRACKET. TORQUE TO 6 FT-LBS MAX.




STEP 4

ALIGN HOLES IN BENCH (NOT INCLUDED) ONTO 3/8-16 X 2 3/4" BOLTS.



STEP 5


PLACE 3/8-16 NYLOCK NUTS ON BOLTS AND TORQUE TO 25 FT-LBS.

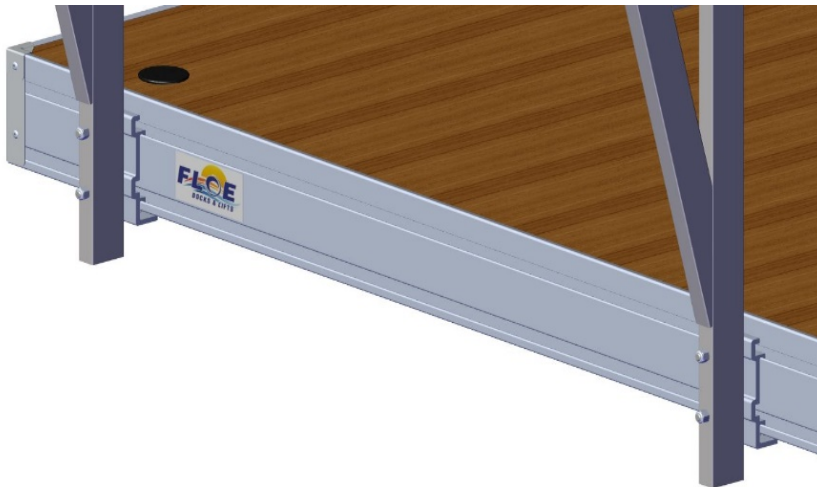

LADDER BRACKETS INSTALLATION


STEP 1

INSERT 3/8-16 x 2 3/4" BOLTS INTO EACH QUICK ATTACH BRACKET

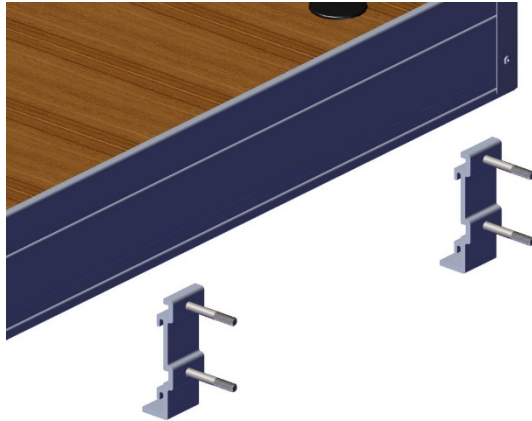

STEP 2

PLACE BRACKETS IN DOCK SIDE 19" APART FROM CENTER TO CENTER OF EACH BRACKET.

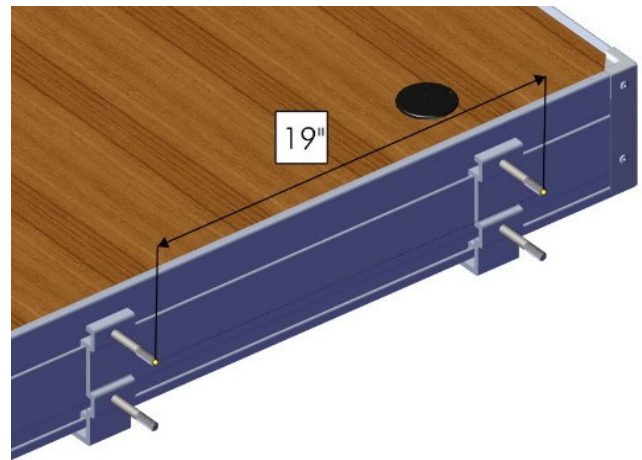

STEP 3

INSERT 3/8-16 x 1" BOLTS INTO BOTTOM OF EACH BRACKET. TORQUE TO 6 FT-LBS MAX.



STEP 4

ALIGN UPPERMOST HOLES IN LADDER (NOT INCLUDED) ONTO 3/8-16 x 2 3/4" BOLTS.



STEP 5

PLACE 3/8-16 NYLOCK NUTS ON BOLTS AND TORQUE TO 30 FT-LBS.

